



Technical data

Substance	
Component	EPDM

Property	Regulation	Value
Colour		black
Outdoor exposure		6 months
Application temperature		above -10 °C ; 14 °F
Temperature resistance		permanent -40 °C to 150 °C ; -40 °F to 300 °F
Storage		cool and dry

Application

For rapid and permanent airtight feedthroughs for pipes through the airtight sealing layer. Can also be used outdoors, e.g. for sub-roofs and for refurbishment vapour check.
Stick with TESCON VANA.

Advantages

- ✓ Secure bond, quick and secure sealing
- ✓ High-quality EPDM, extremely flexible and elastic, no excess bushing
- ✓ Waterproof, also suitable for penetrations in façades and roof linings
- ✓ Pipes can be still be pulled or pushed
- ✓ Construction in adherence with standards: for airtight bonding in accordance with DIN 4108-7, SIA 180 and RE 2020
- ✓ Excellent values in hazardous substance testing, has been tested according to the ISO 16000 evaluation scheme

Substrates

Clean subsurfaces before sticking.

Adhesion to frozen surfaces is not possible. There must be no water-repellent substances (e.g. grease or silicone) on materials to be bonded. Subsurfaces must be sufficiently dry and stable.

Permanent adhesion is achieved on all pro clima interior and exterior membranes, other vapour-check and airtight membranes (e.g. those made of PE, PA, PP and aluminium) as well as other roof and wall lining membranes (e.g. those made of PP and PET).

Bonding and joints are possible on planed and painted wood, hard plastics and metal (e.g. pipes, windows etc.), hard wood-based panels (chipboard, OSB, plywood, MDF and wood fibre underlay panels).

Pretreatment with TESCON PRIMER is required in the case of adhesion to wood-fibre underlay panels and smooth mineral subsurfaces. Concrete or plaster subsurfaces must not be sandy or crumbling.

The best results in terms of structural stability are achieved on high-quality subsurfaces.

It is your responsibility to check the suitability of the subsurface; adhesion tests are recommended in certain cases.

Pretreatment with TESCON PRIMER is recommended in the case of subsurfaces with insufficient stability.

General conditions

The bonds should not be subjected to tensile strain.

Press firmly to secure the adhesive tapes in place. Ensure that there is sufficient resistance pressure.

Windproof, airtight or rainproof bonding can only be achieved on vapour checks, roof underlays or wall lining membranes that have been laid without folds or creases.


Ventilate continuously and systematically to prevent build-up of excessive humidity; use a dryer if necessary.

The information provided here is based on practical experience and the current state of knowledge. We reserve the right to make changes to the recommended designs and processing or to make alterations due to technical developments and associated improvements in the quality of our products. We would be happy to inform you of the current technical state of the art at the time you use our products.

Further information about the application and construction can be found in the pro clima planning documentation. For queries please call the pro clima technical hotline on +49 (0)6202 278245.

MOLL
bauökologische Produkte GmbH
Rheinalstraße 35 - 43
D-68723 Schwetzingen
Fon: +49 (0) 62 02 - 27 82.0
eMail: info@proclima.de



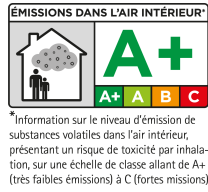

The information provided here is based on practical experience and the current state of knowledge. We reserve the right to make changes to the recommended designs and processing or to make alterations due to technical developments and associated improvements in the quality of our products. We would be happy to inform you of the current technical state of the art at the time you use our products.

Further information about the application and construction can be found in the pro clima planning documentation. For queries please call the pro clima technical hotline on +49 (0)6202 278245.

MOLL
bauökologische Produkte GmbH
Rheintalstraße 35 - 43
D-68723 Schwetzingen
Fon: +49 (0) 62 02 - 27 82.0
eMail: info@proclima.de

